

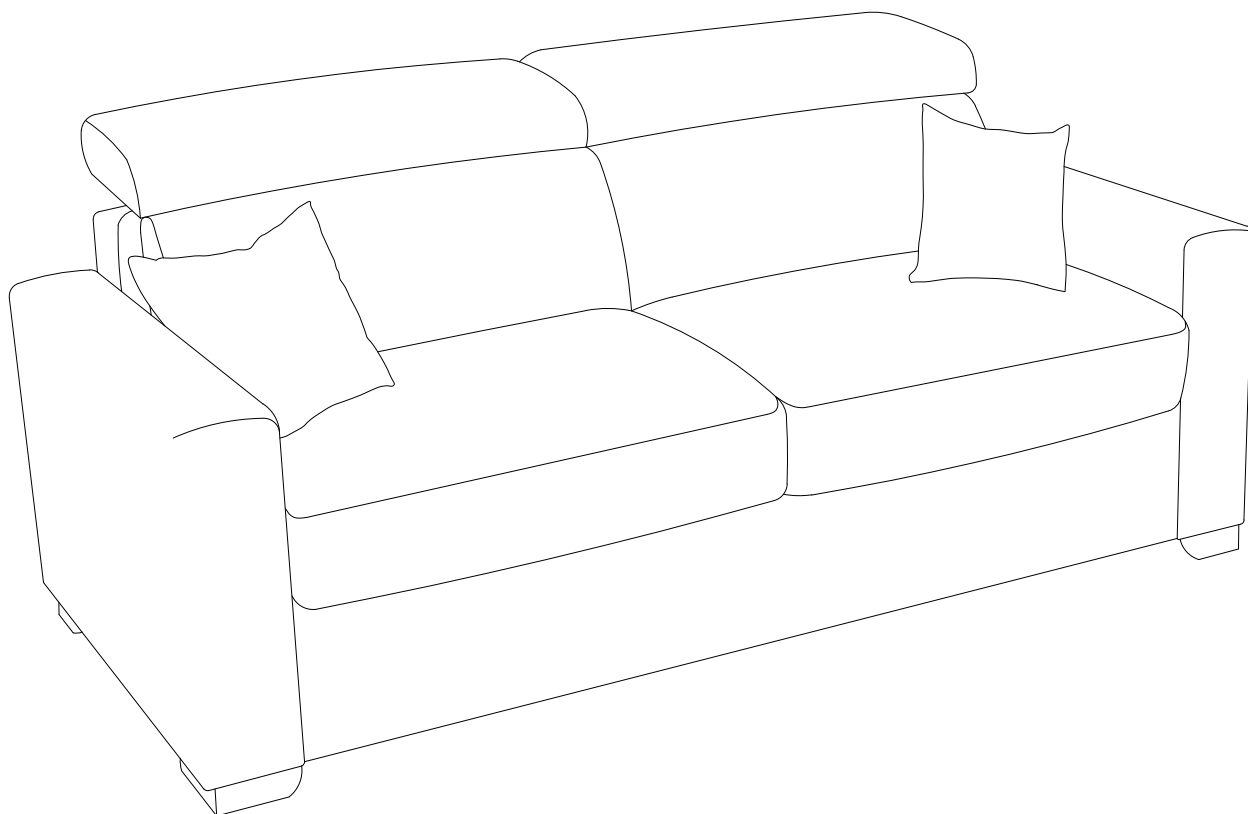



x2

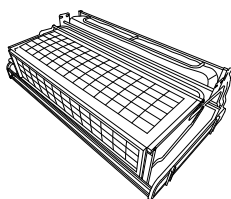


x1




A x 4

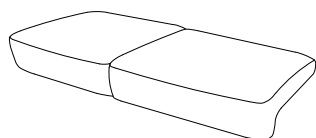


x1

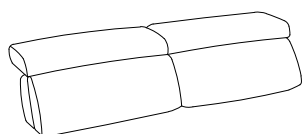


x1

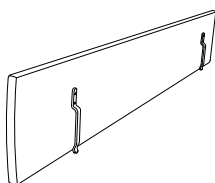


x1

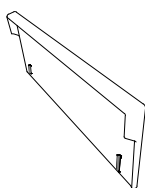

x1

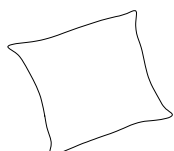


x2



B x 8
M6x20mm




C x 4




Not include



D x 4
M10




Allen key x 1
4mm






Spanner x 1
17mm


STEP 1

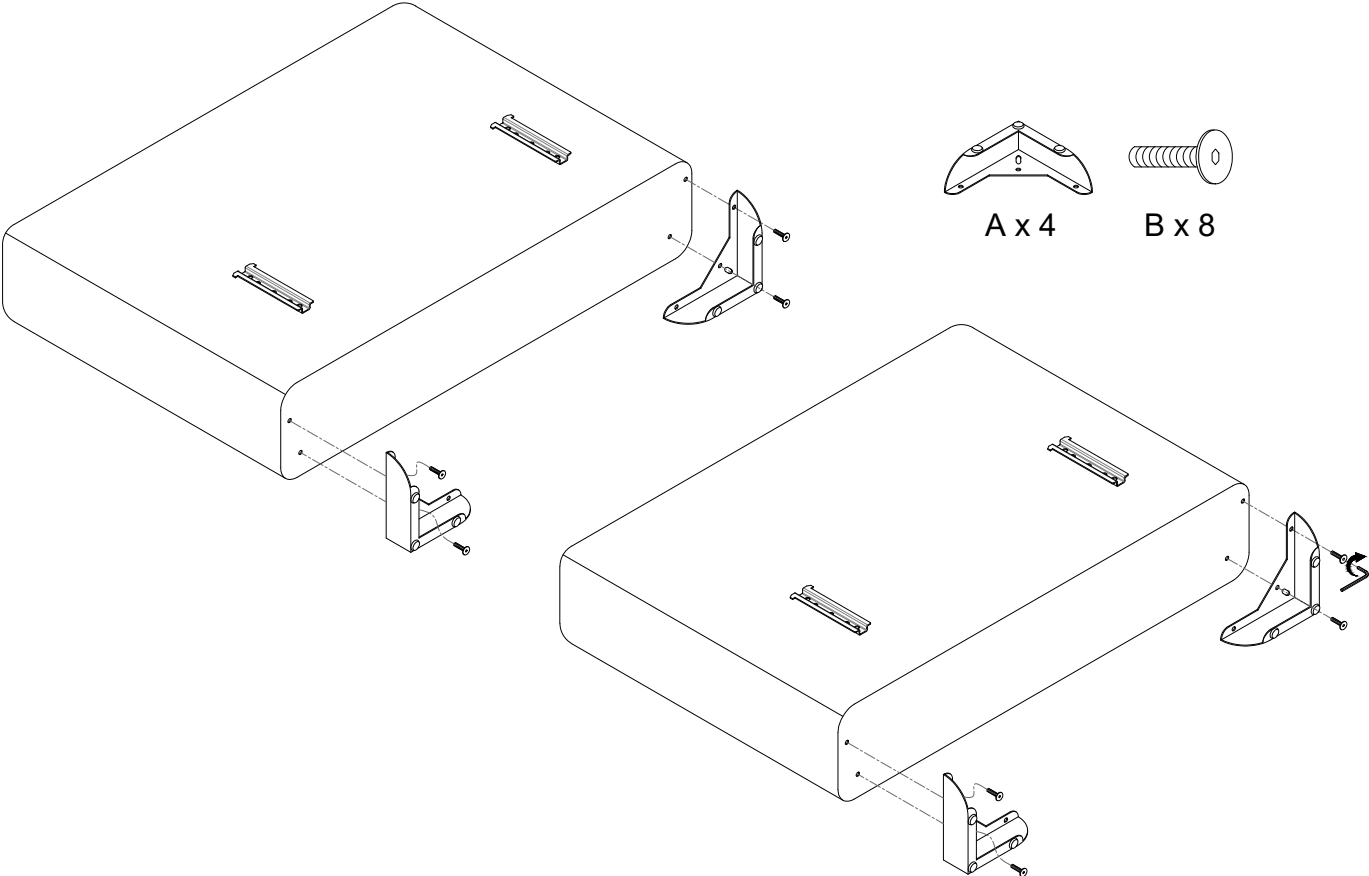


STEP 2

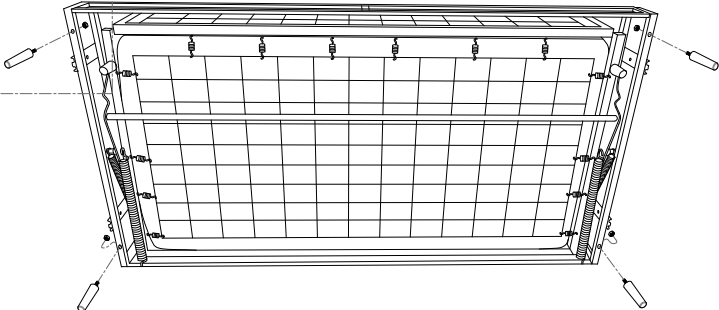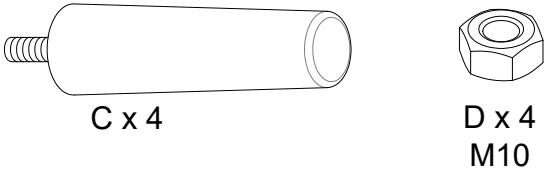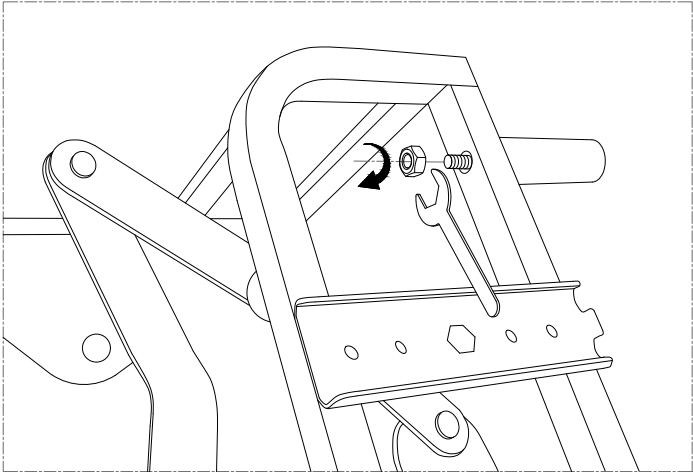


STEP 3

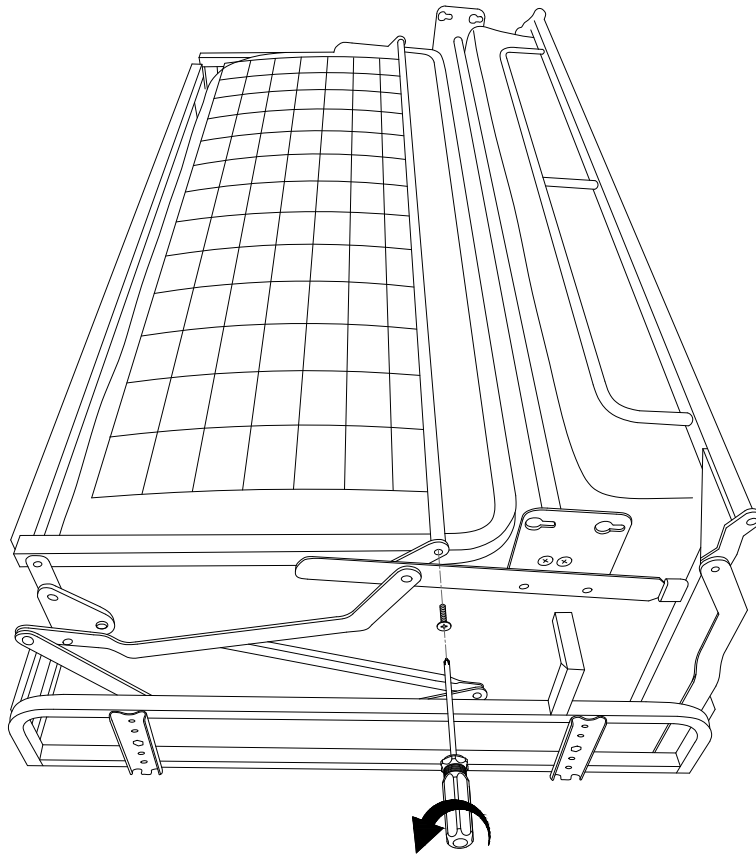


STEP 4

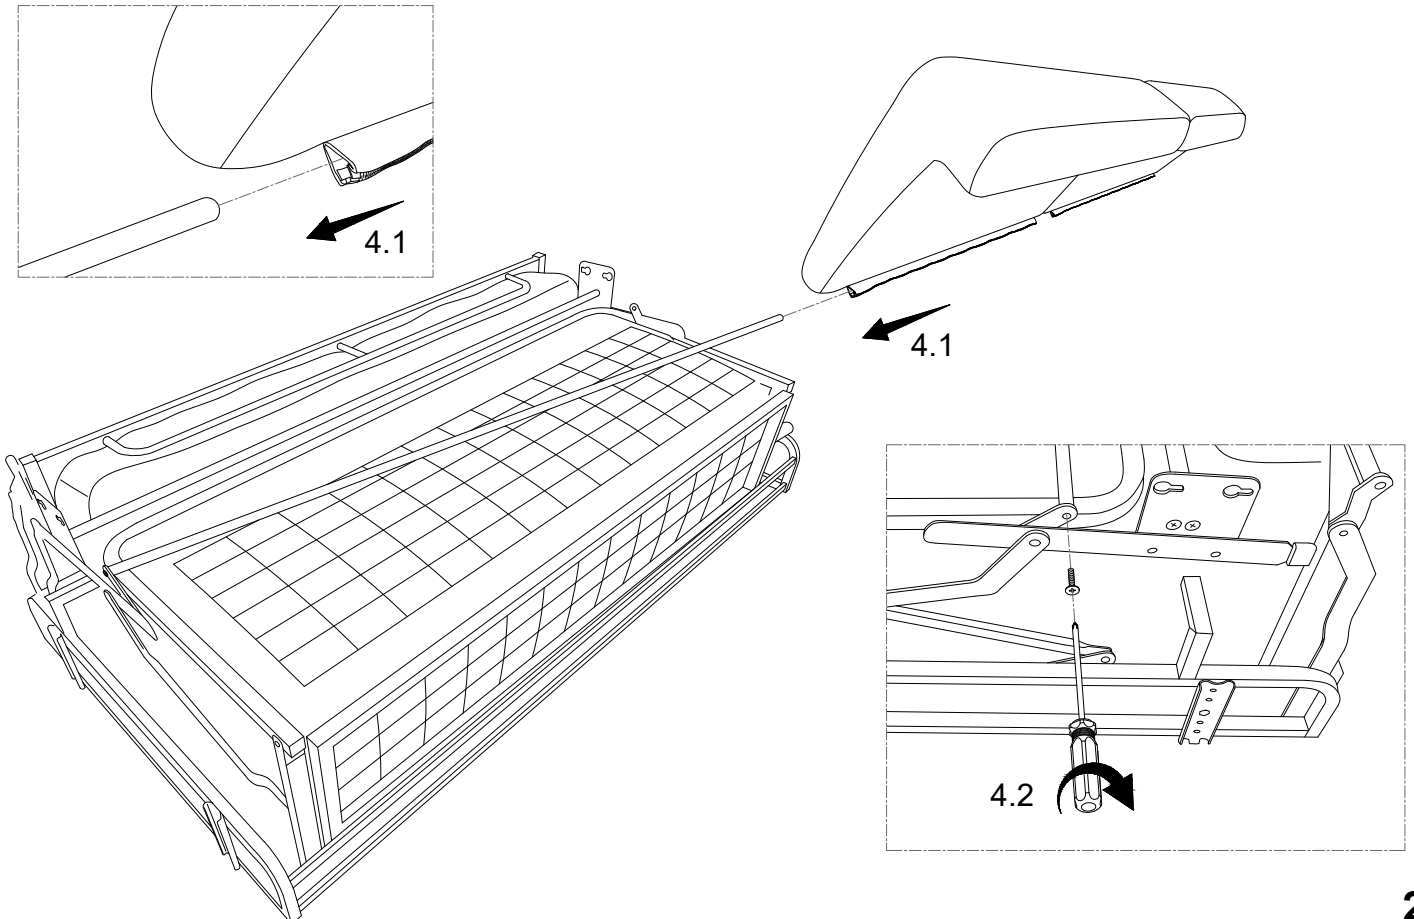


STEP 5

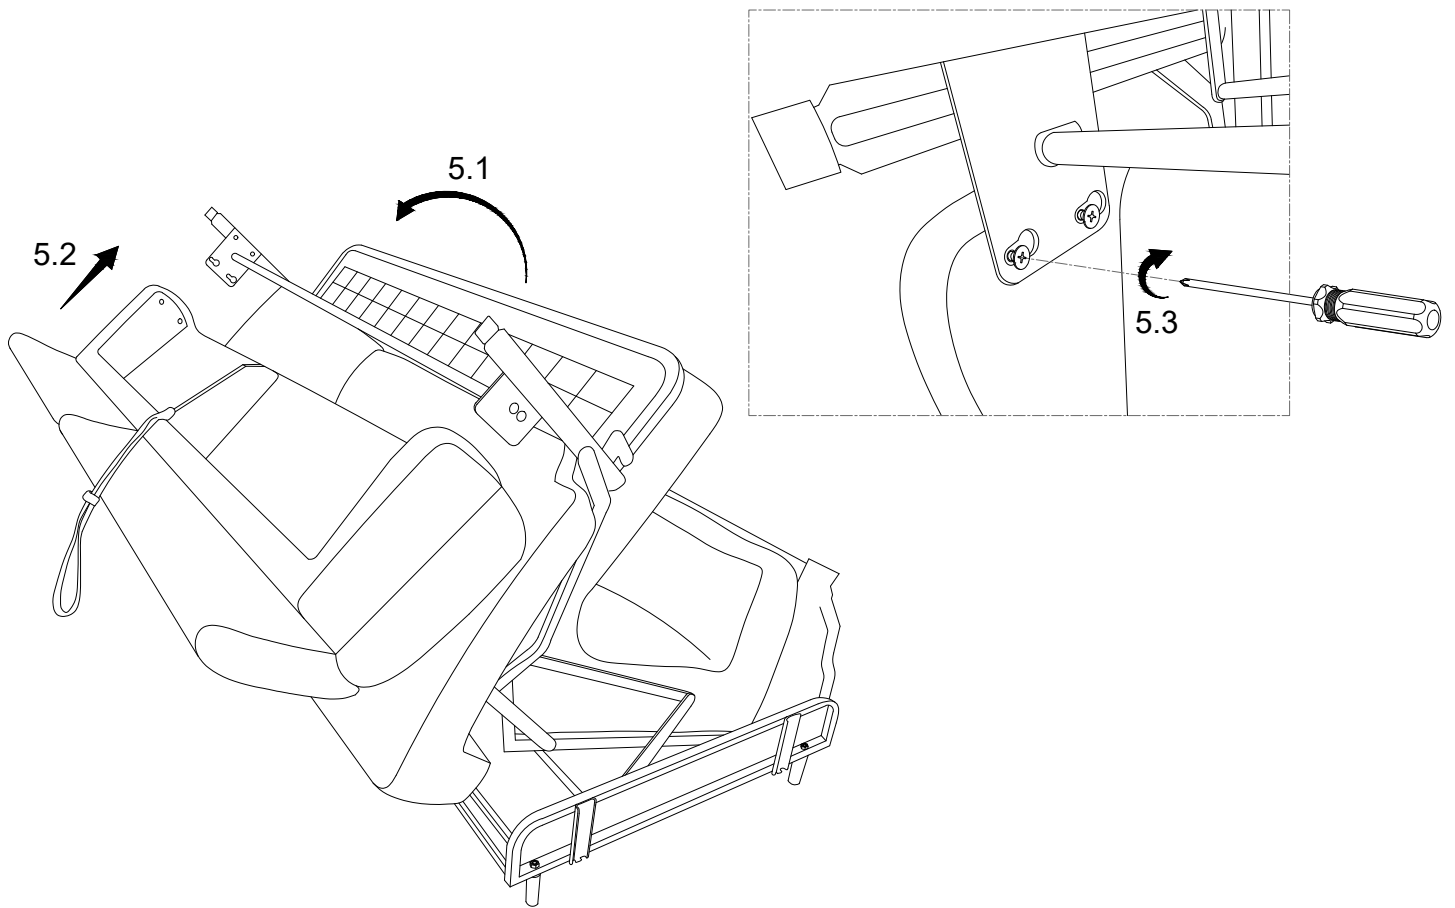


STEP 6

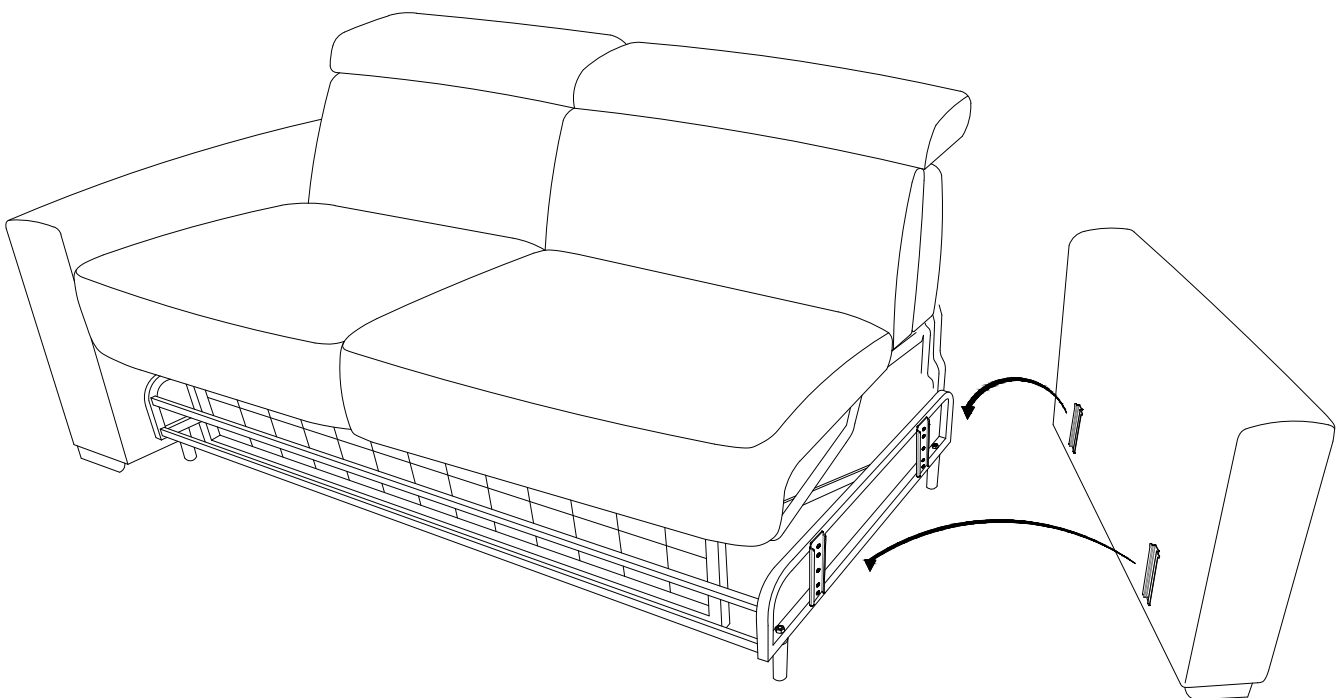



STEP 7

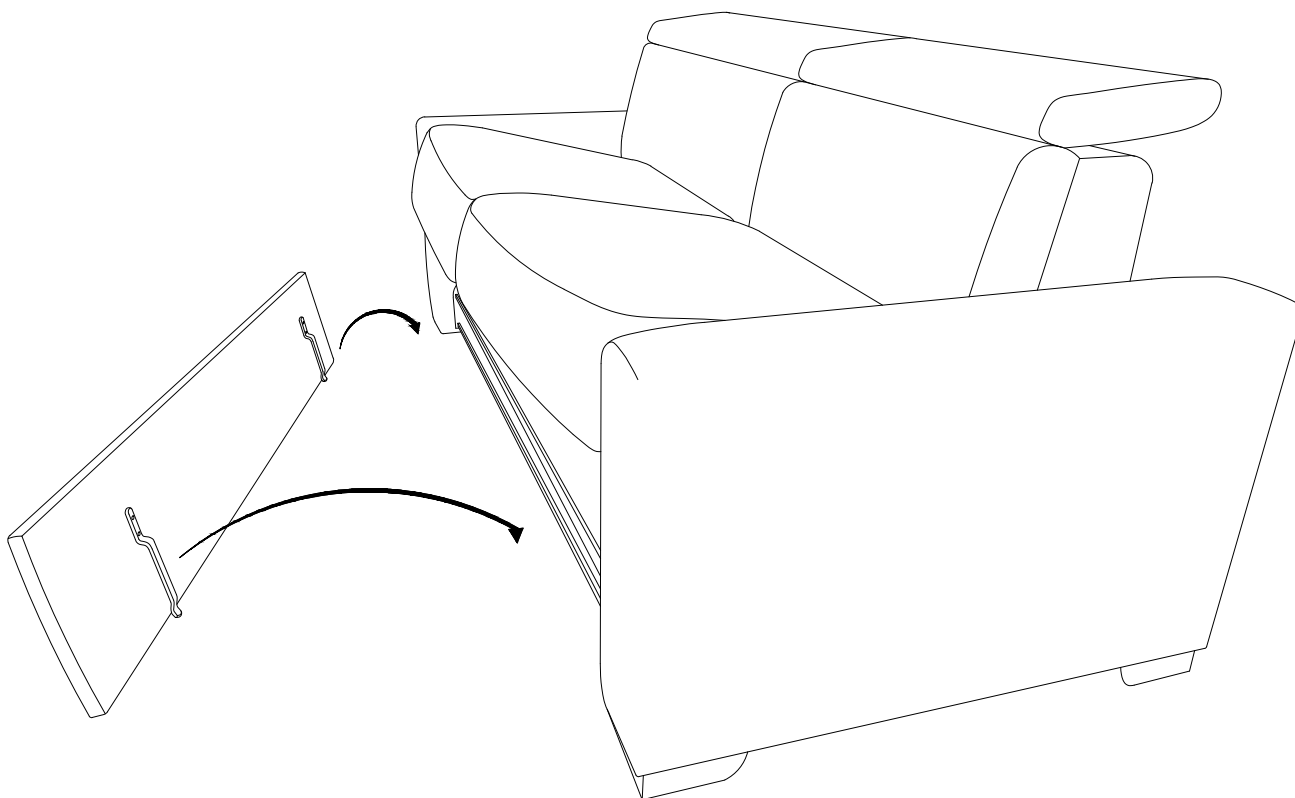

STEP 8

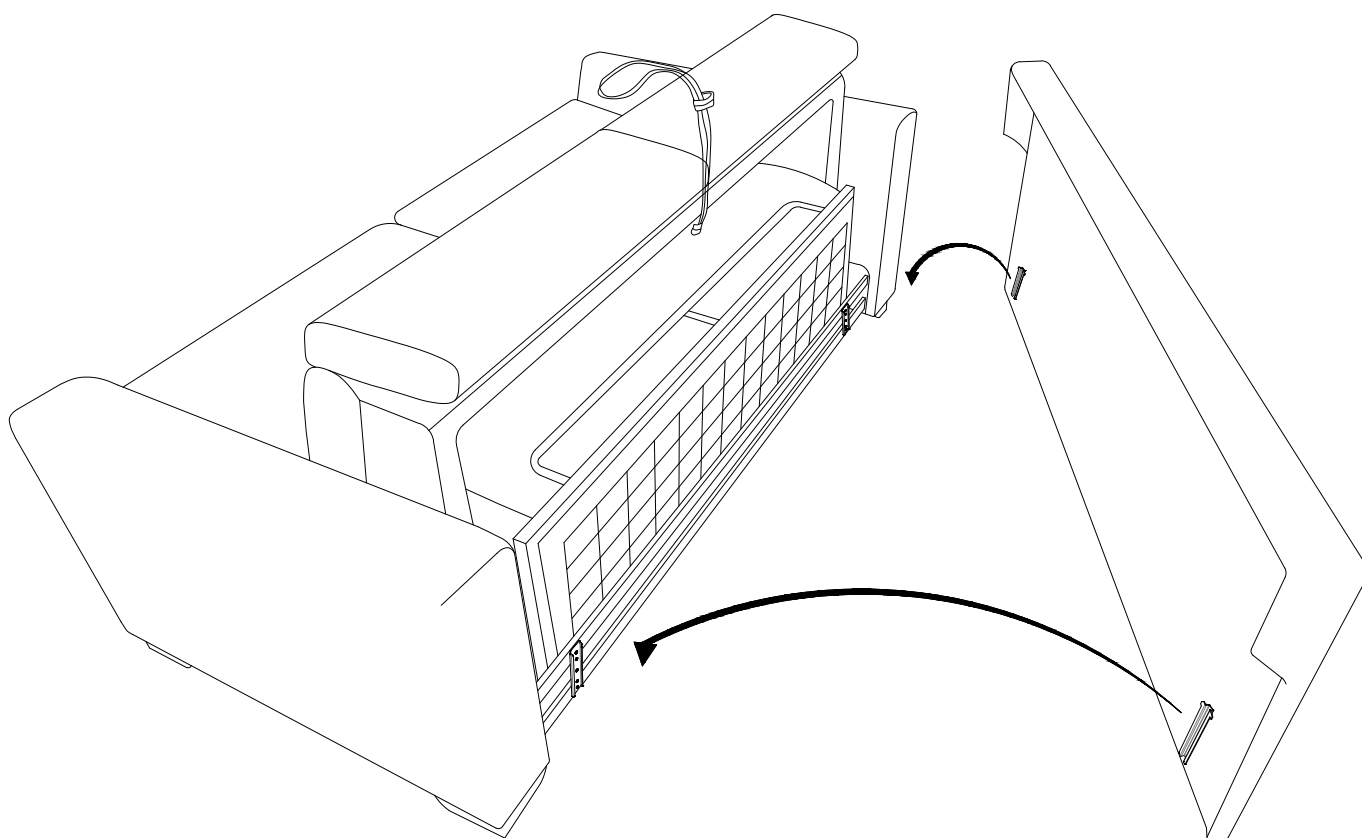

STEP 9

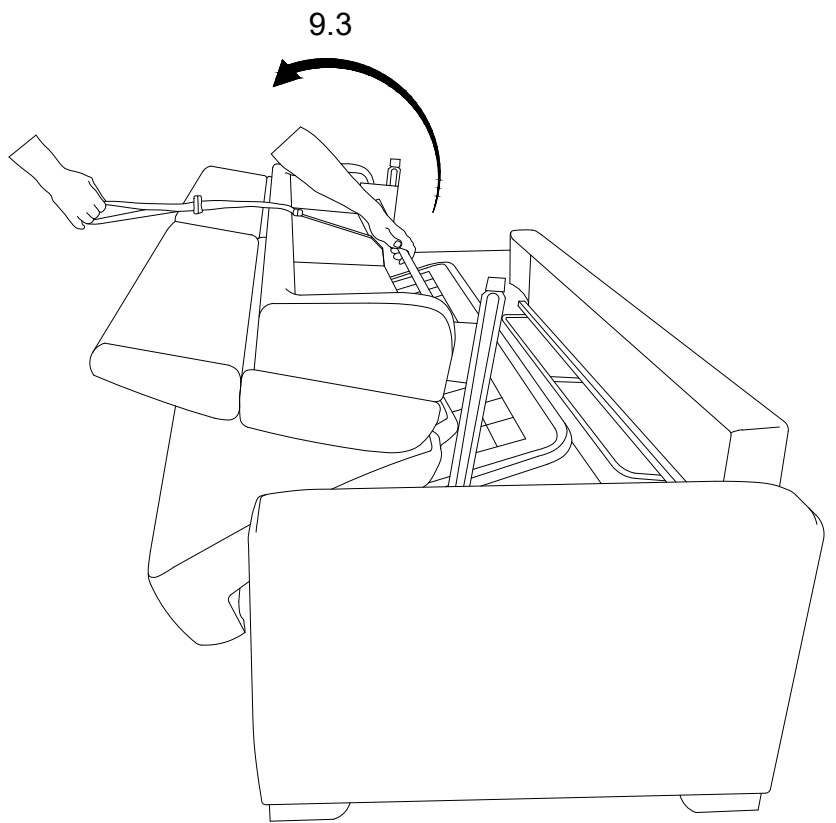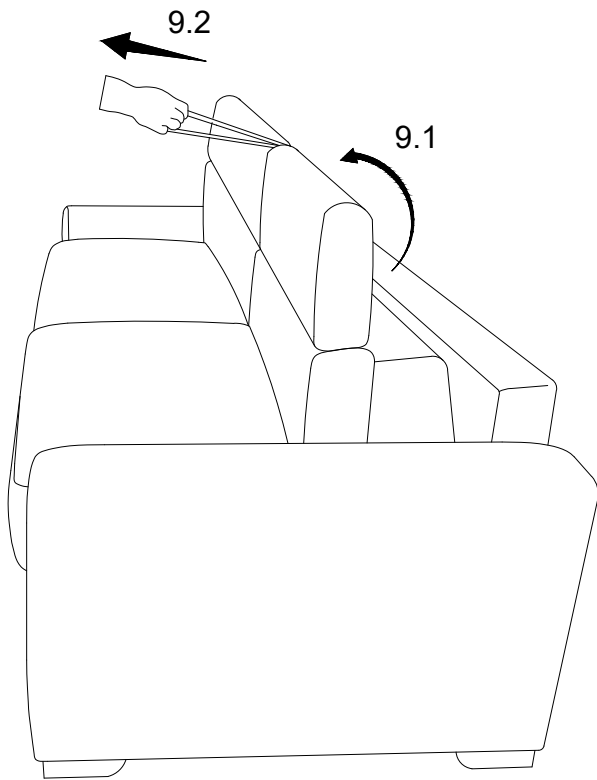

STEP 10

